

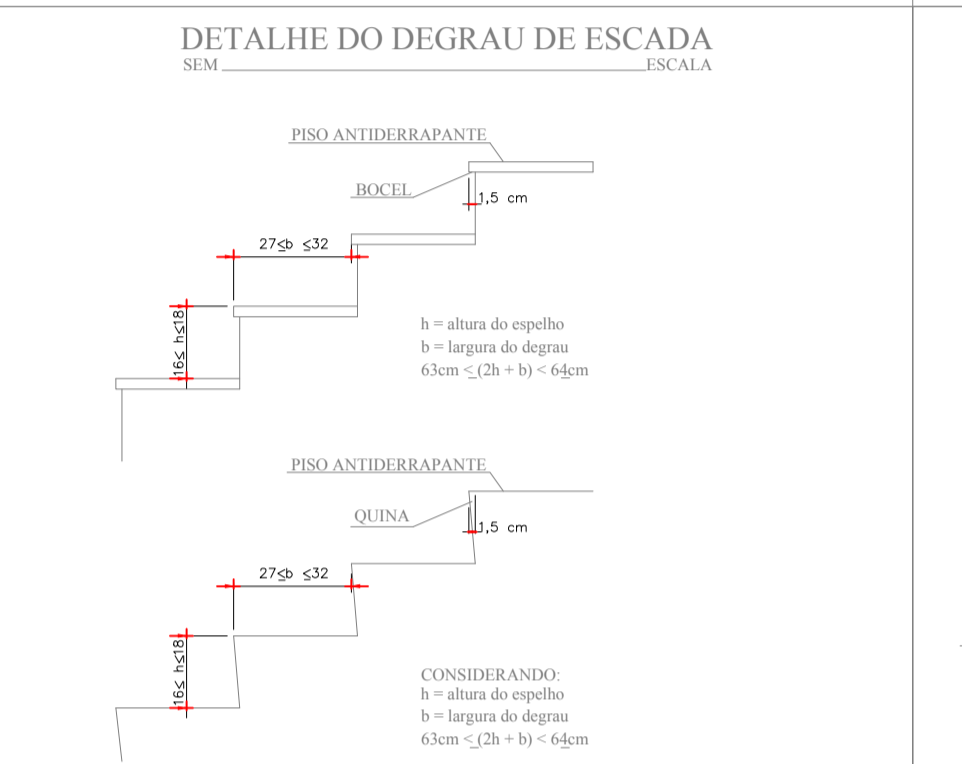
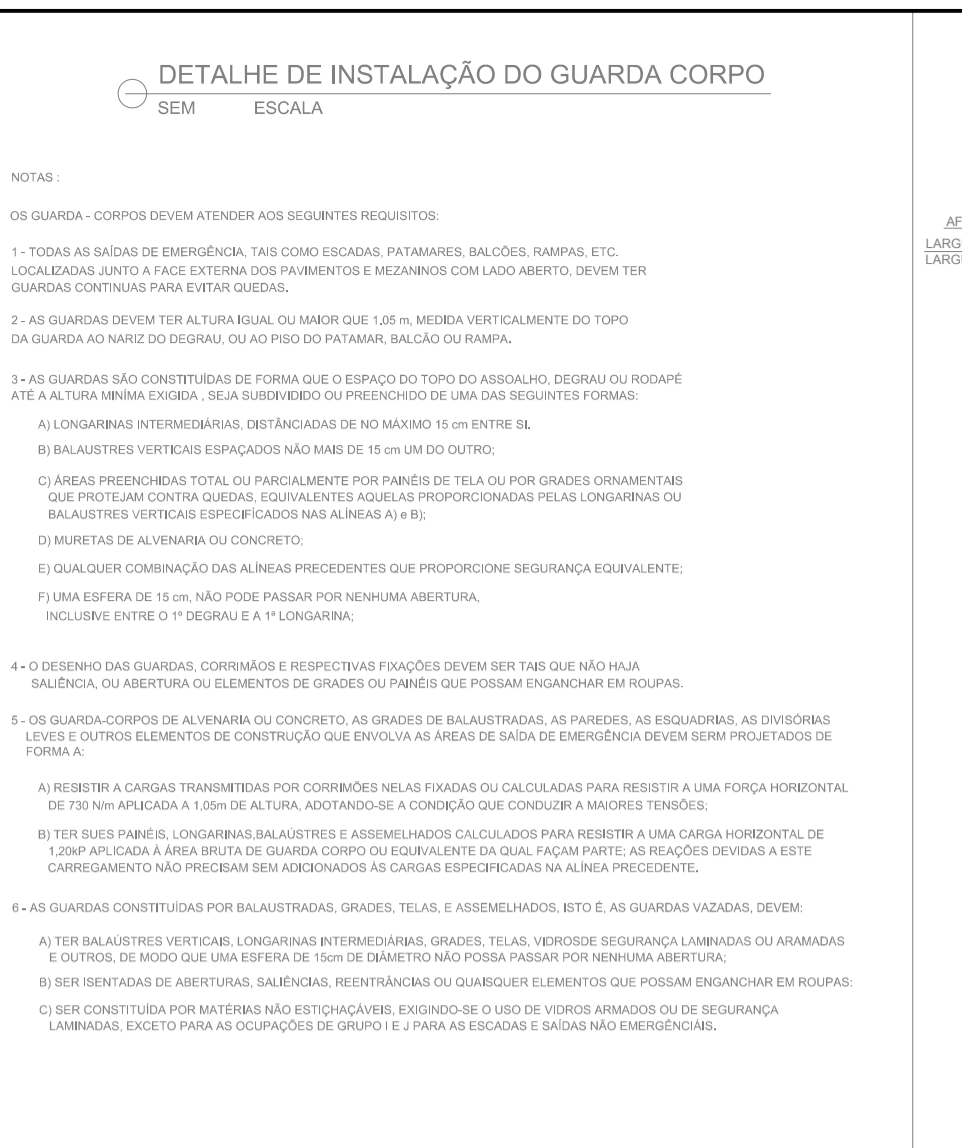


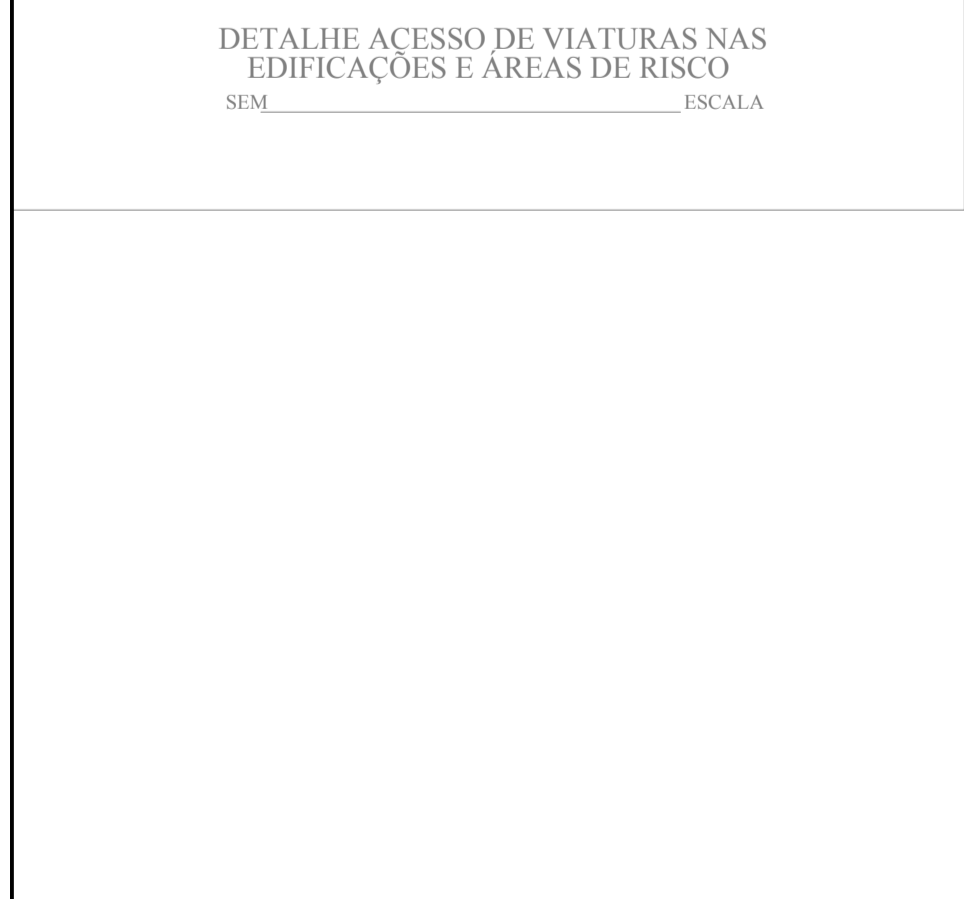

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO





ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

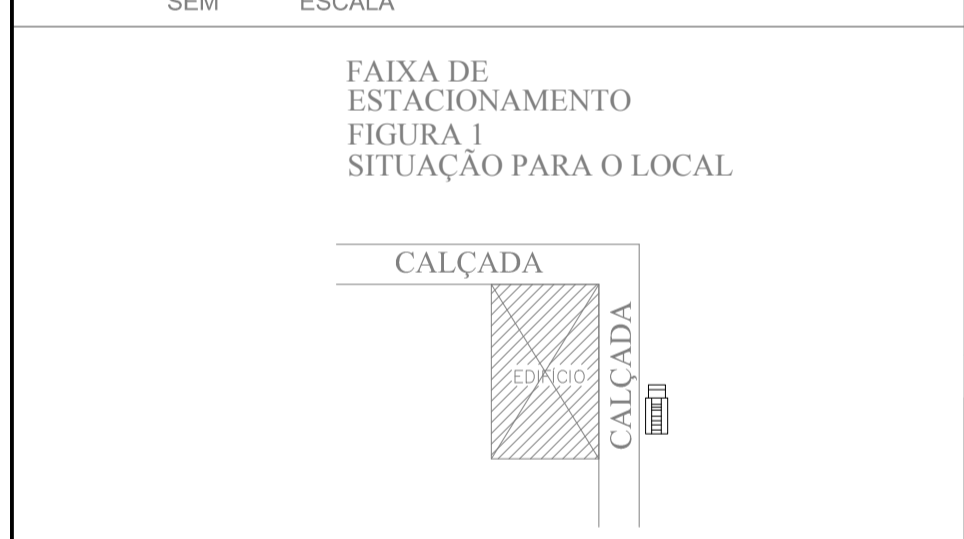

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO





ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

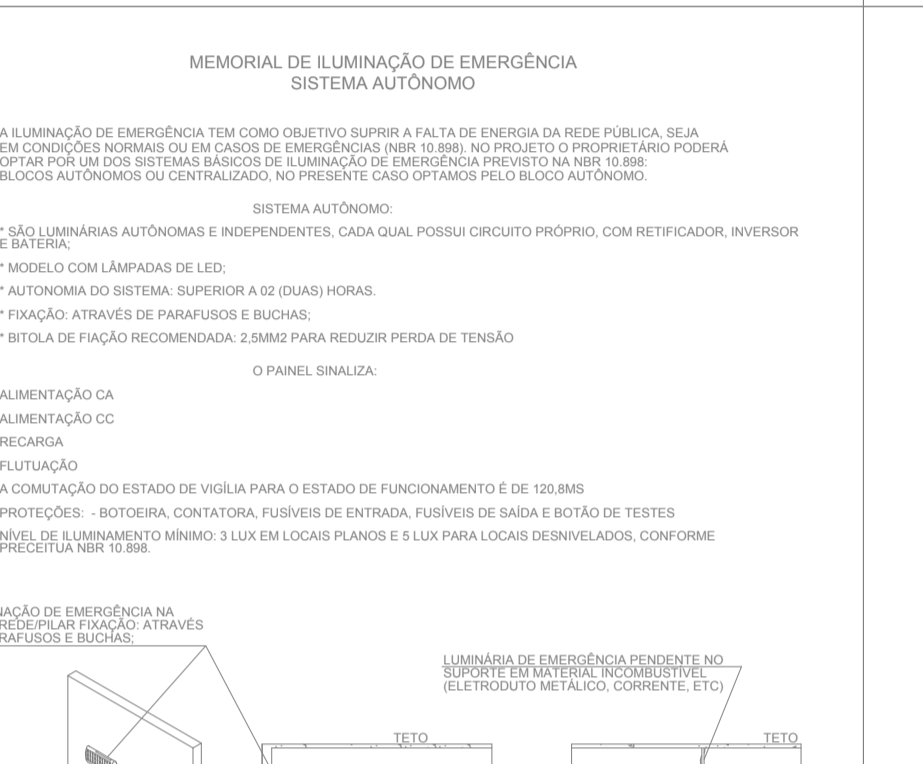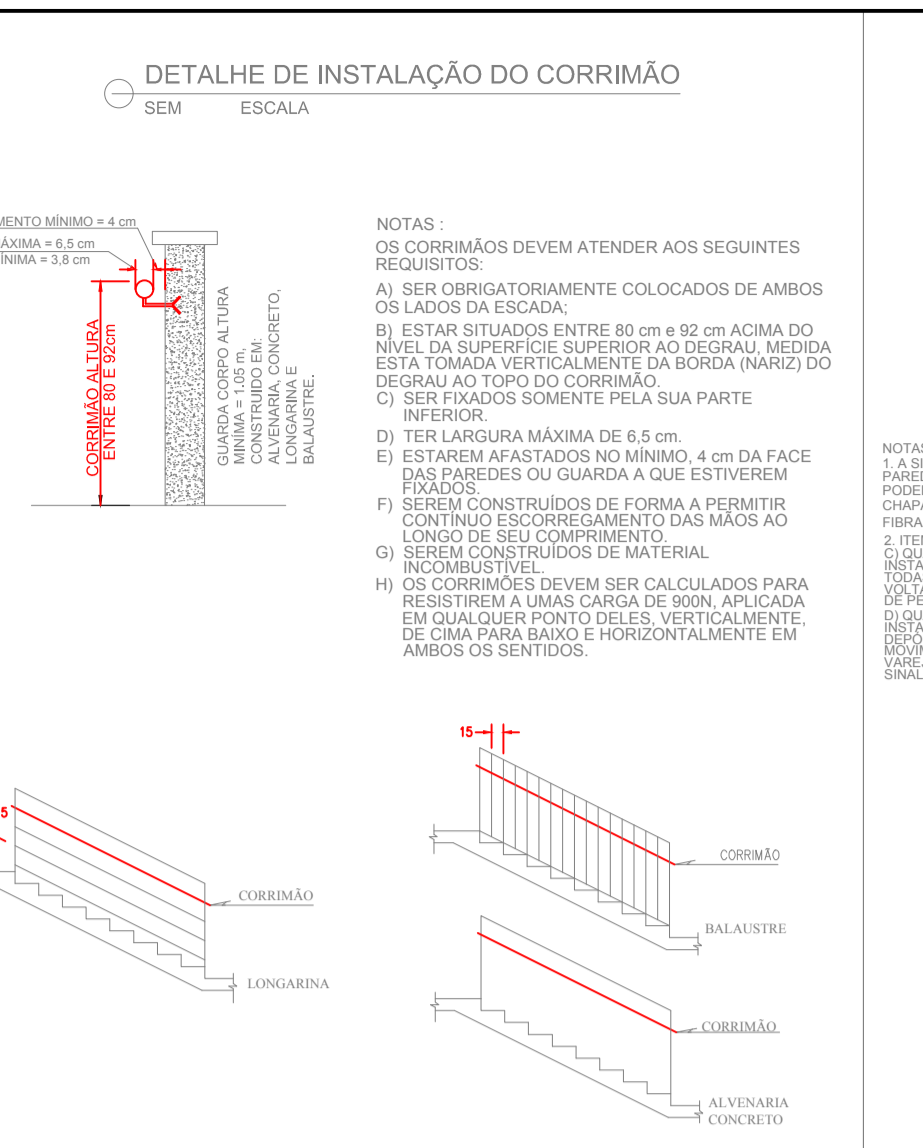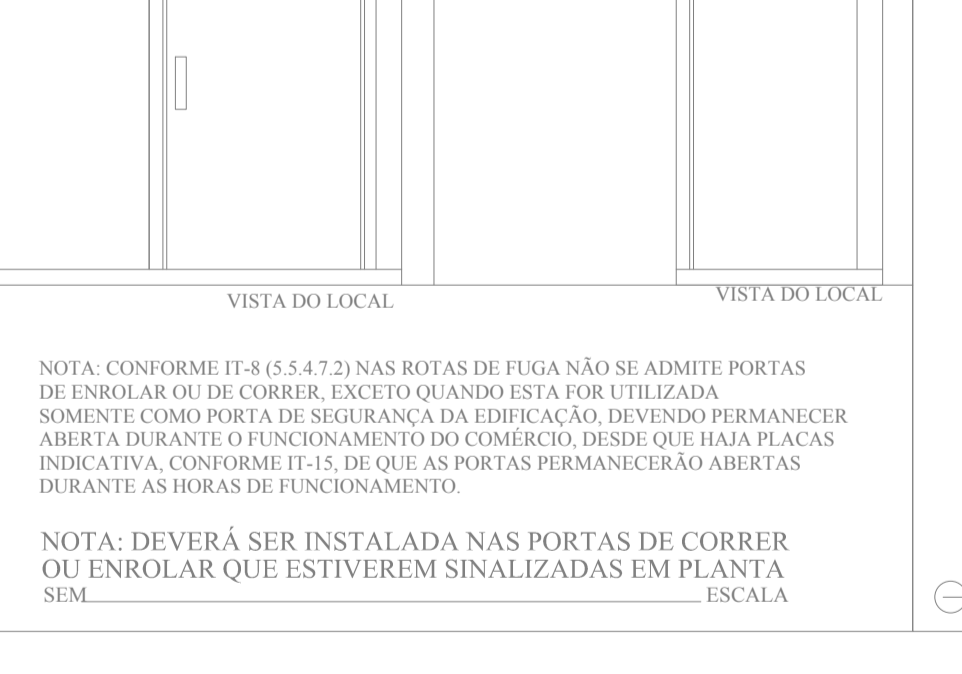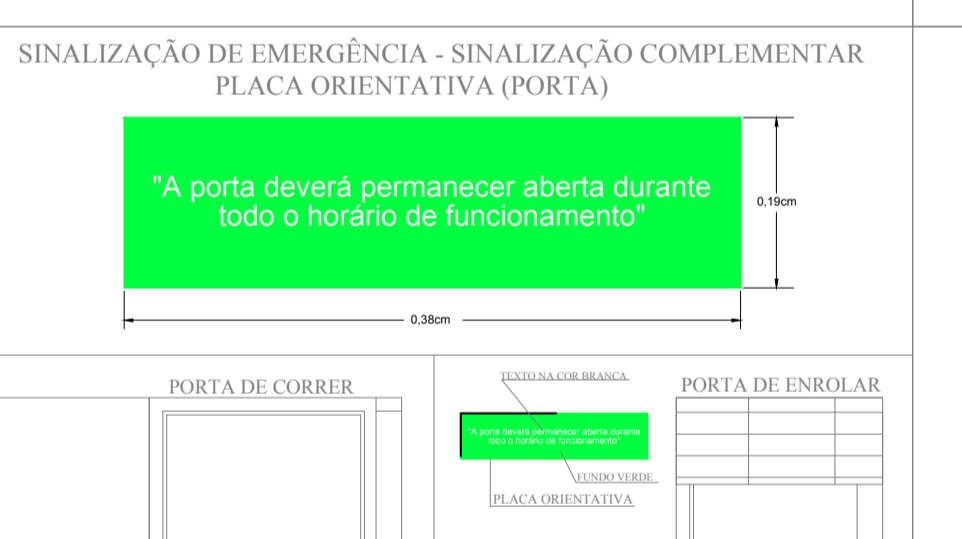

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO



ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

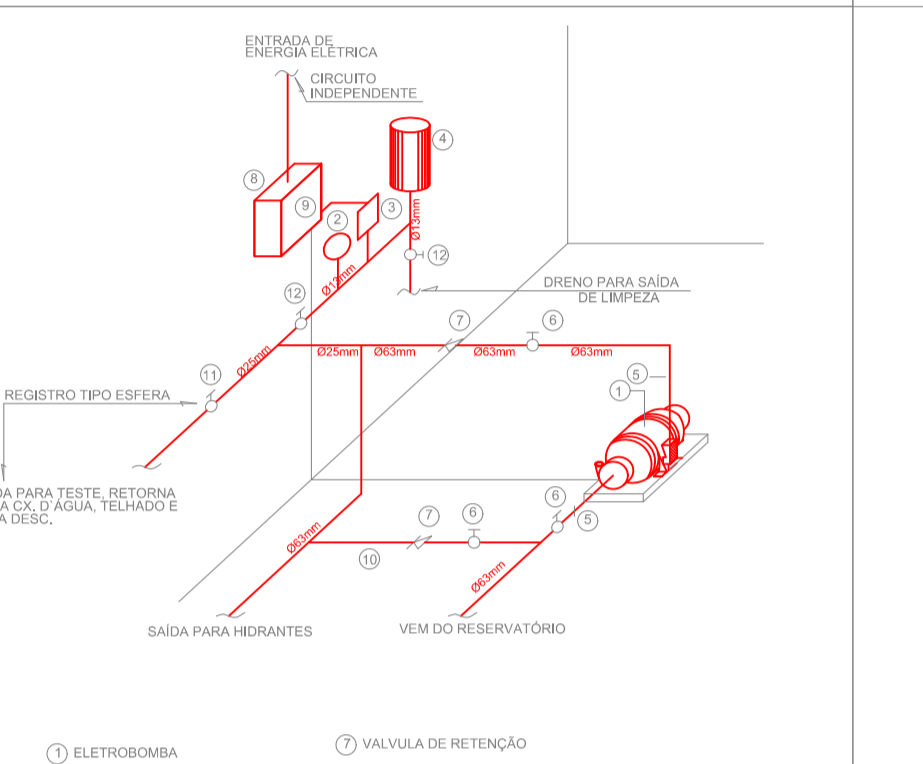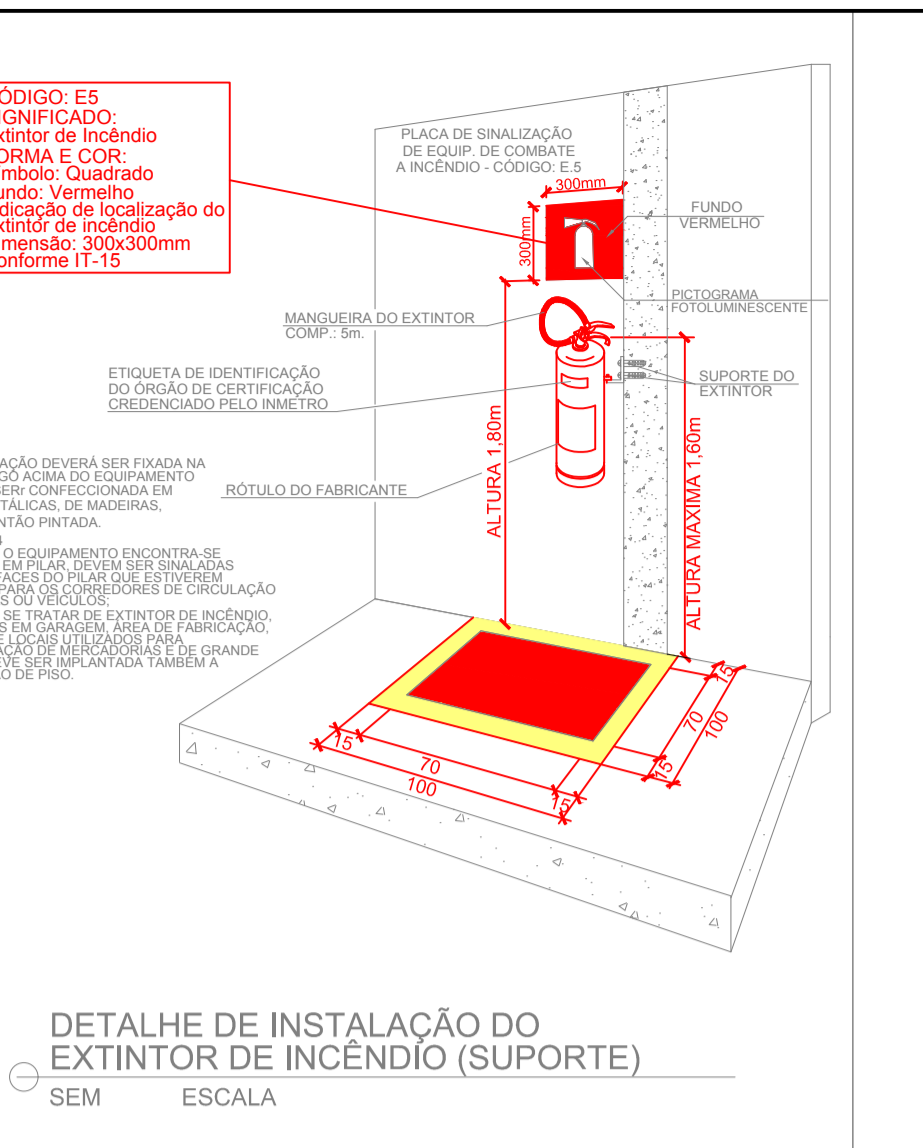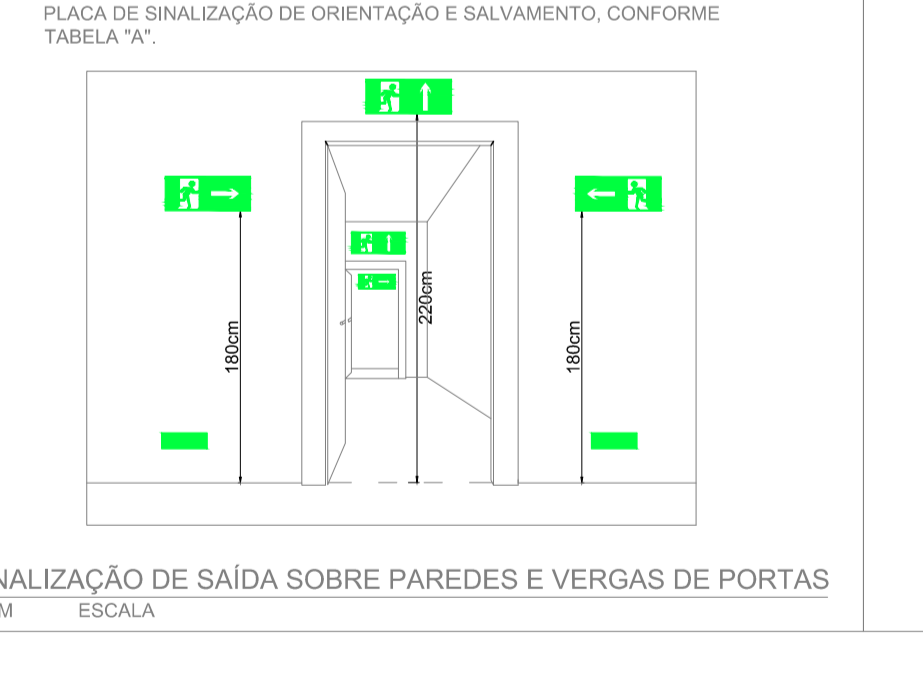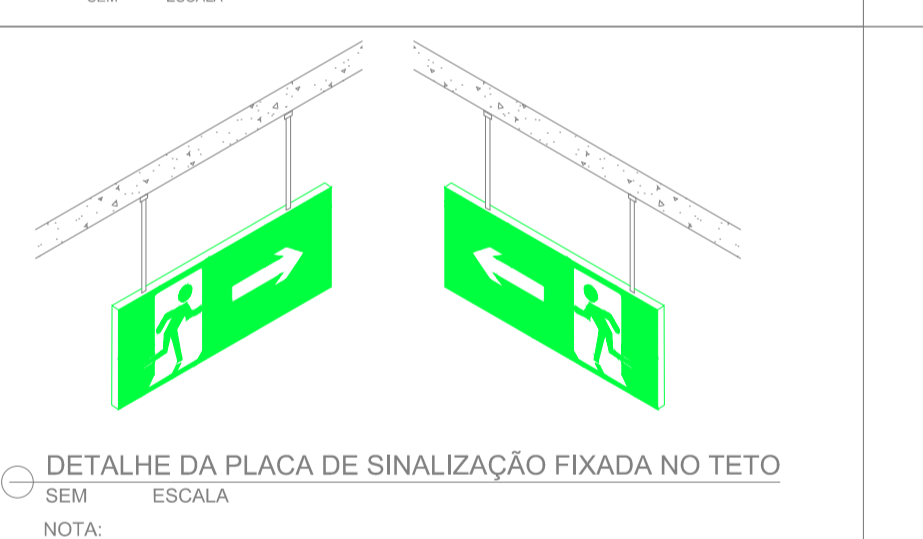

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO





ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

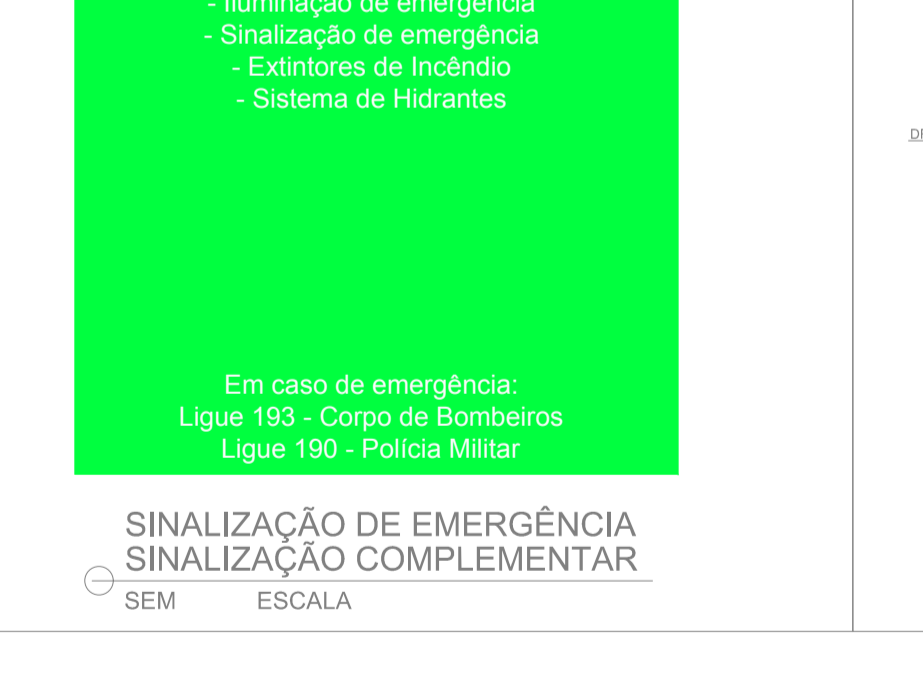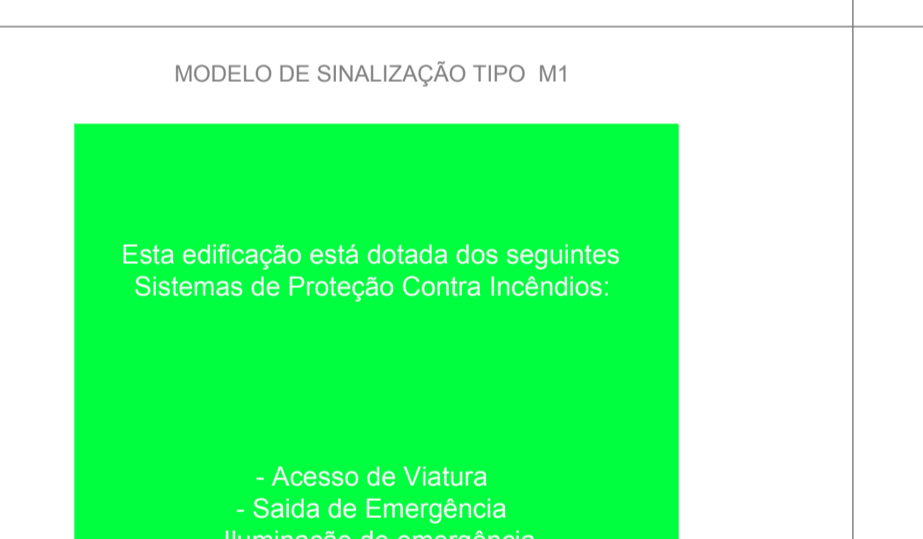

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO





ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

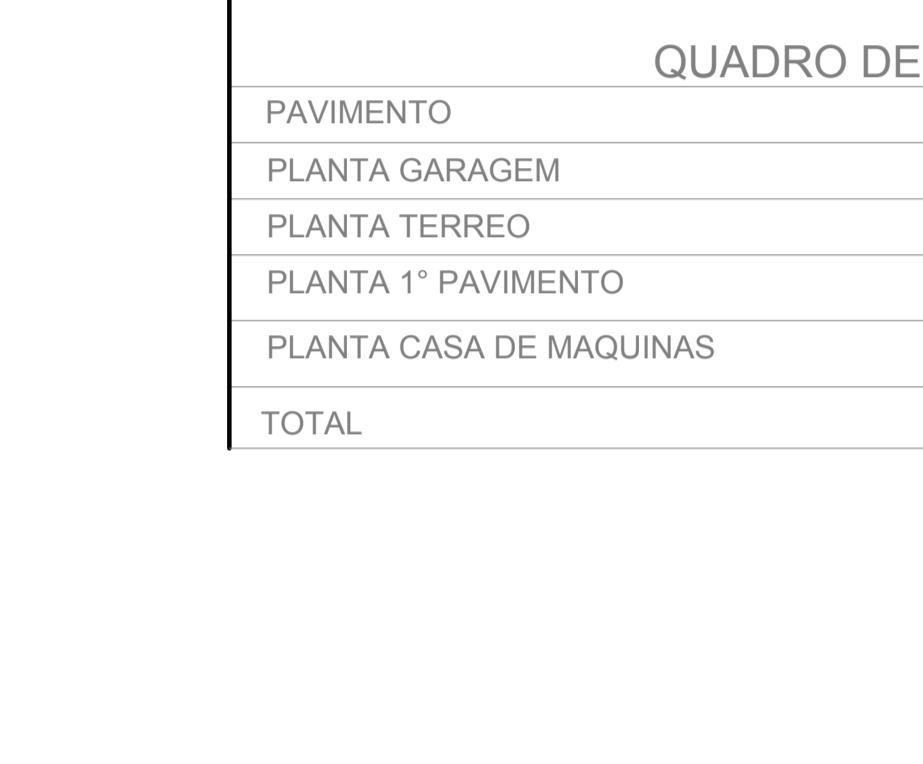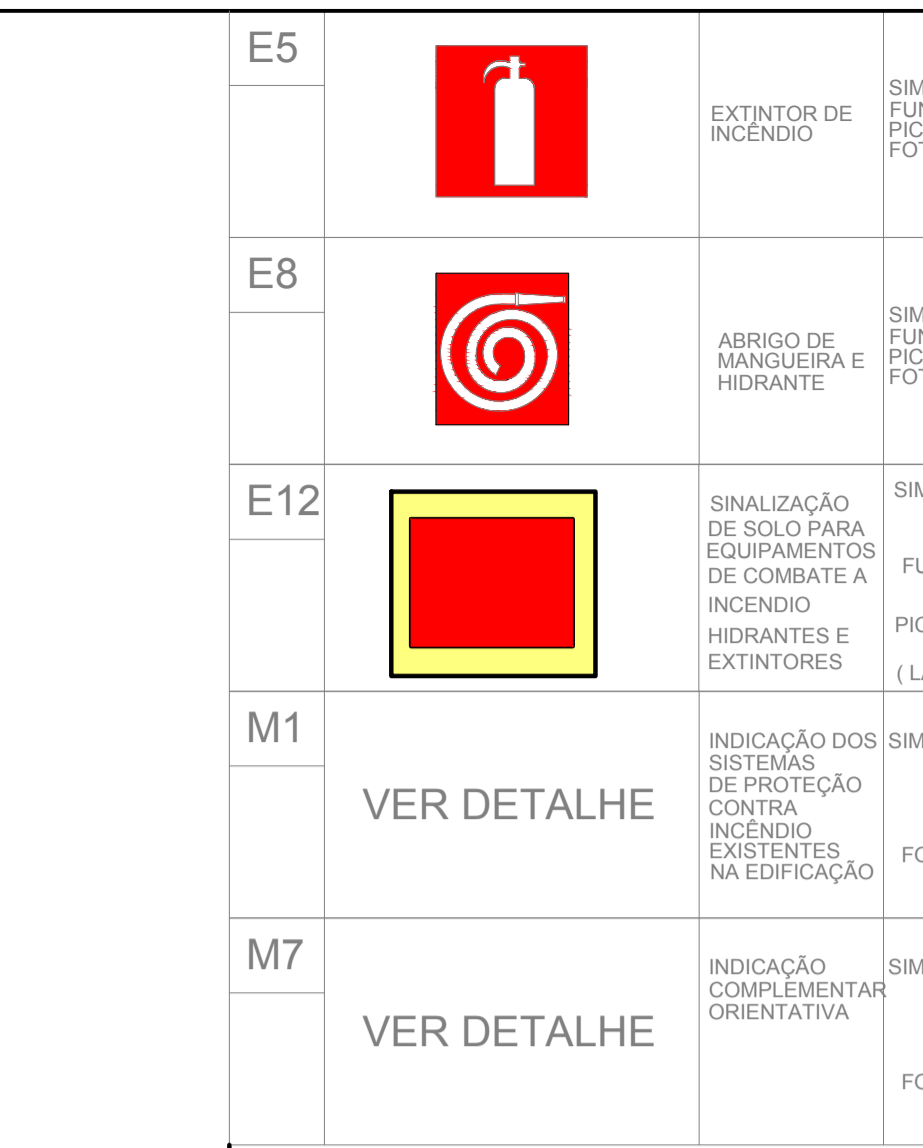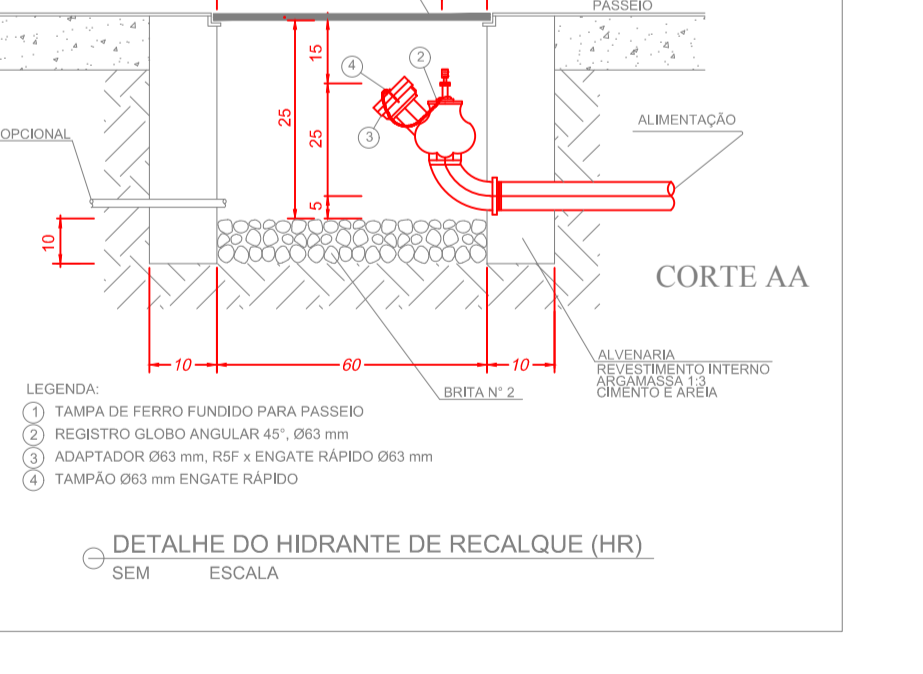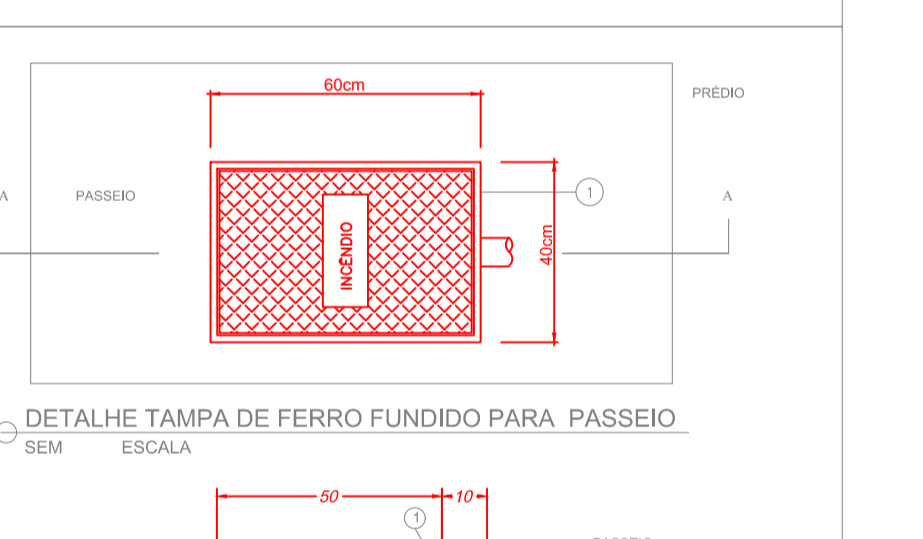

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO




ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

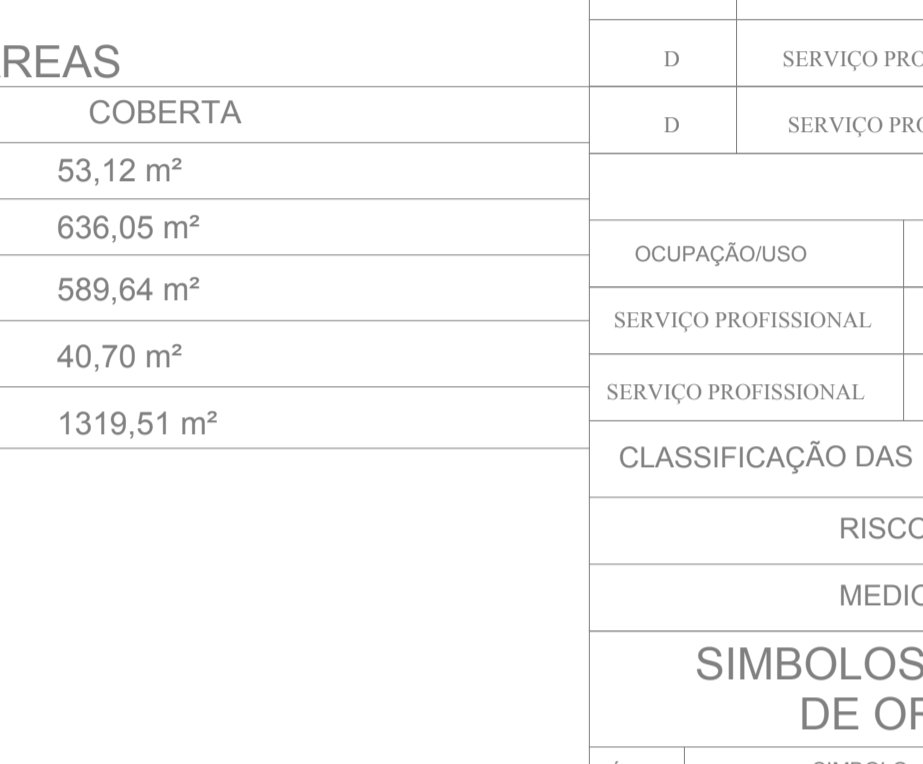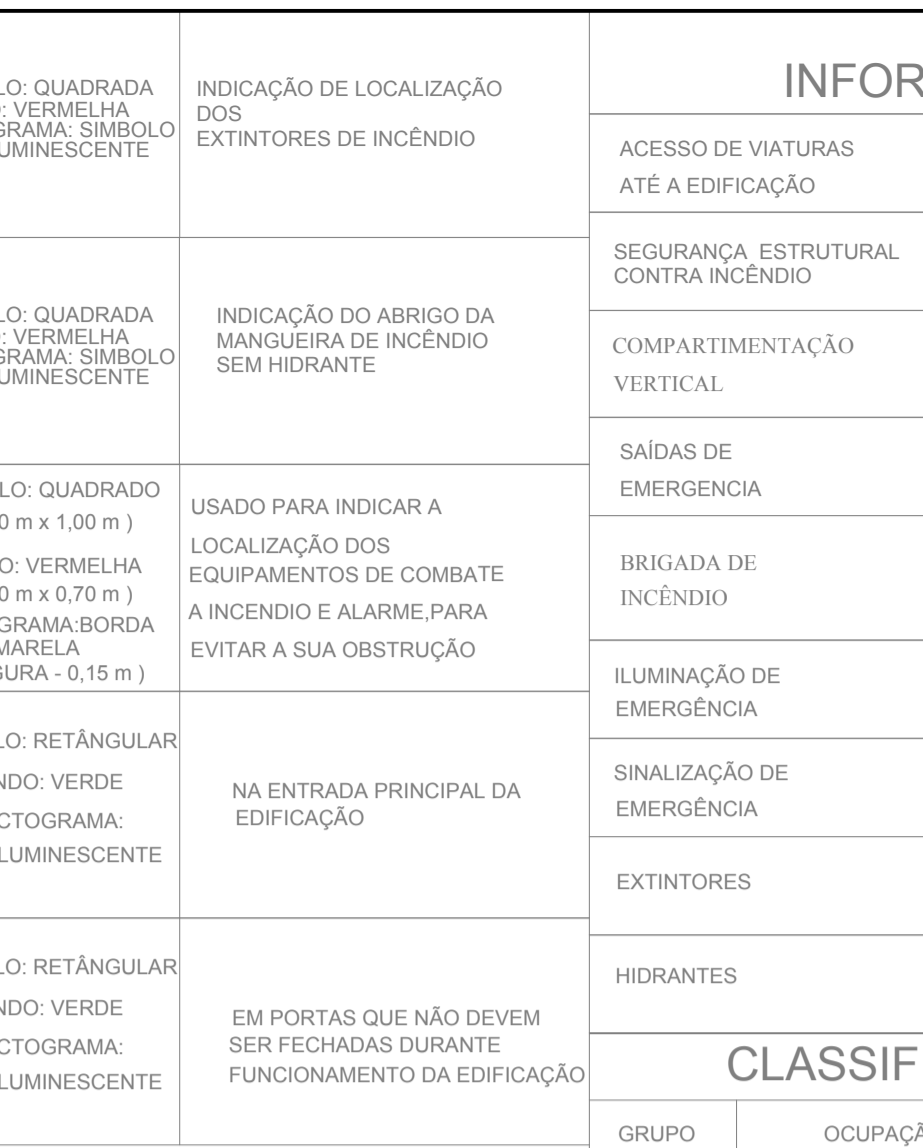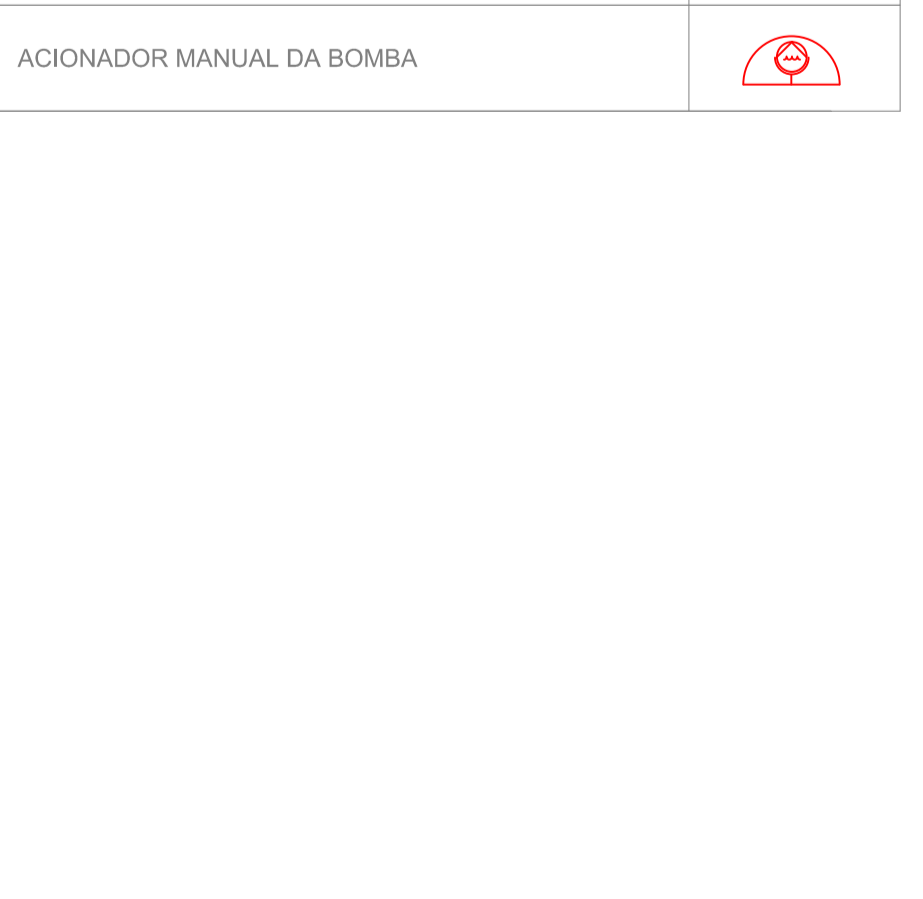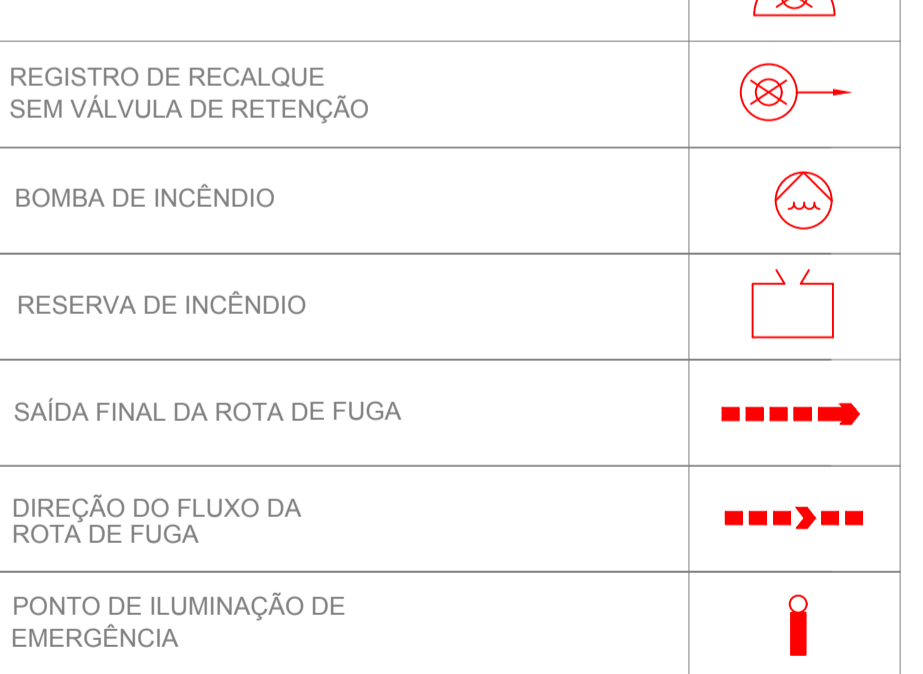

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO

ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

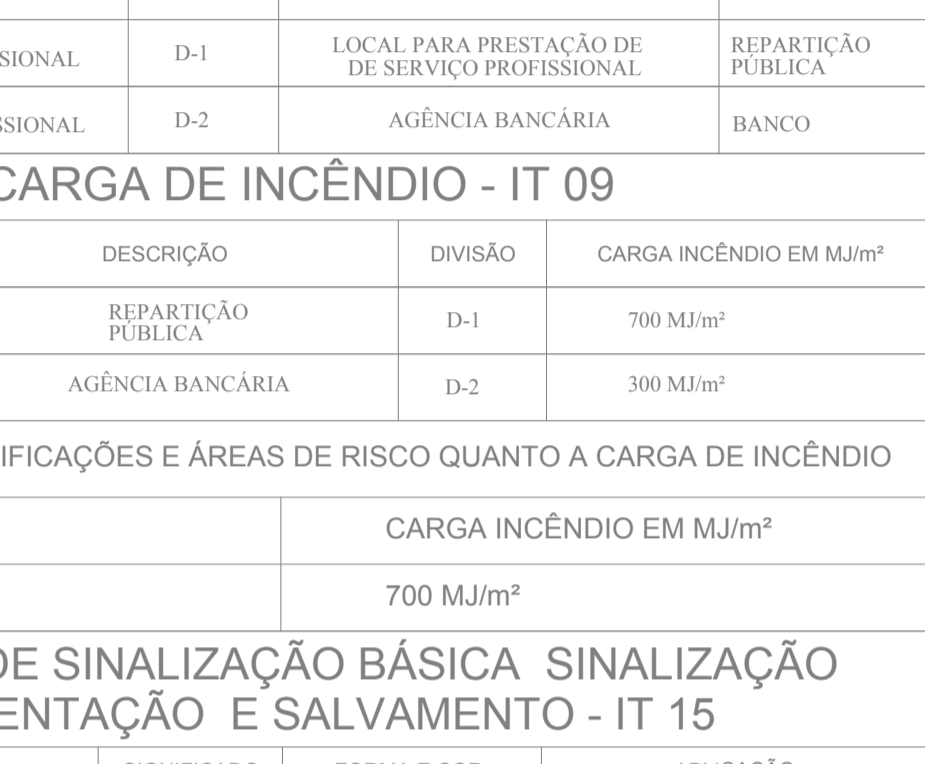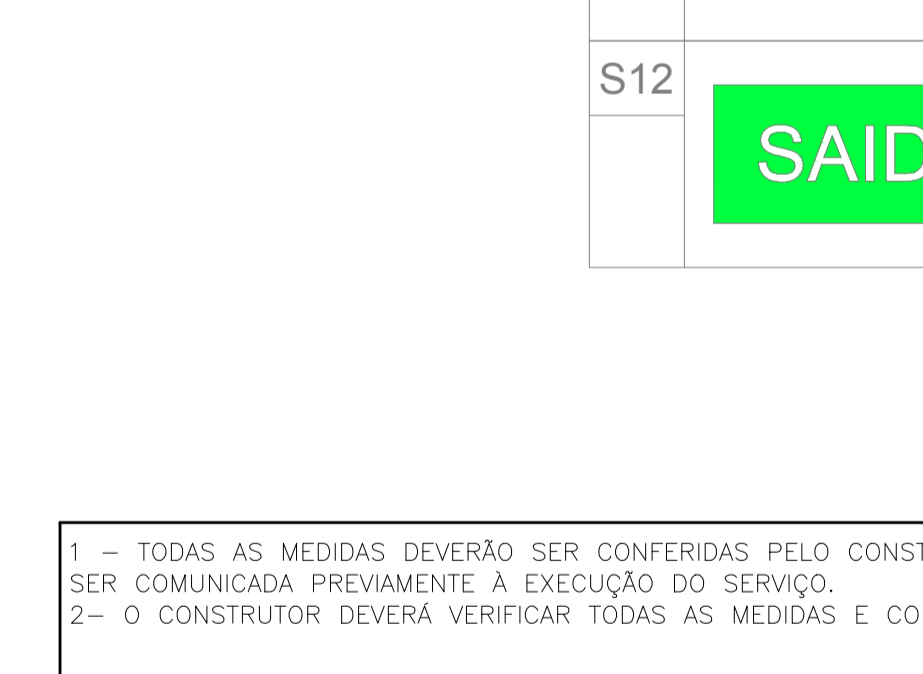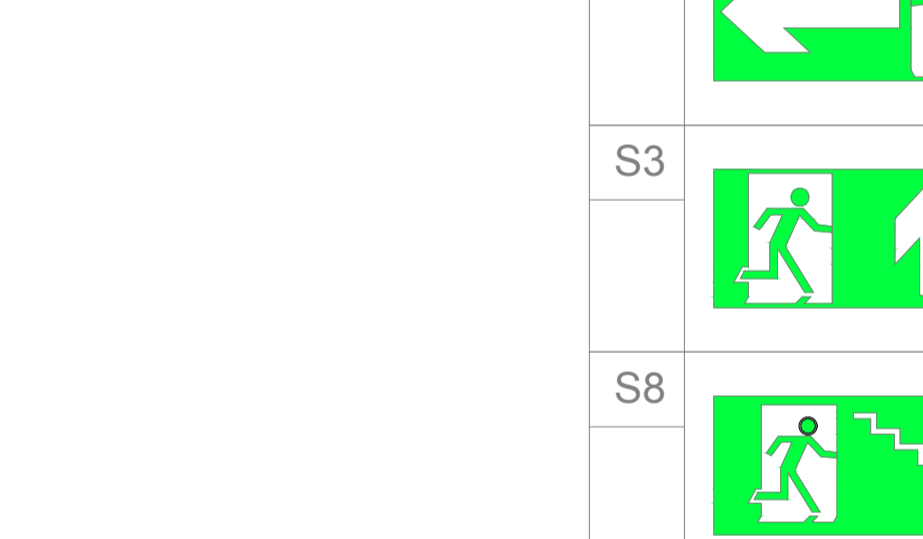

TABELA

DIMENSÕES DAS CAIXAS PARA HIDRANTE INTERNO

ESCALA	300	400	500	600	700	800	900
30	15	20	25	30	35	40	45
38	20	25	30	35	40	45	50
38	2 x 15	30	35	40	45	50	55
38	3 x 15	35	40	45	50	55	60

